

www.canatura.com/en

TERA MANUAL



Table of Contents

Page

- 3 - What is Included
- 4 - About the Tera
- 6 - Key Features
- 8 - What is in a Tera device?
- 9 - How the Tera Works
- 10 - How to Turn the Tera 'ON'
- 11 - Using the Temperature
- 12 - Mouthpiece Components
- 13 - How to remove the Mouthpiece
- 15 - How to Load Herb and Concentrate
- 16 - How to Use the WPA
- 18 - How to Clean the Tera
- 20 - Battery and Charging
- 23 - Warranty
- 26 - Safety Disclaimers
- 30 - Contact Information

What Is Included

- (1) Tera Unit
- (1) Swivel Mouthpiece
- (1) Glass Mouthpiece
- (2) LG 18650 2500 mAh Batteries
- (1) Water Pipe Adapter
- (5) Stainless Steel Chamber Screens
- (1) Stainless Steel Mesh Concentrate Pads
- (2) Mouthpiece Screens
- (1) Cleaning Brush
- (1) Packing Tool
- (1) USB Charger
- (1) User Manual




About the Tera

The Tera is the newest aromatherapy device addition to the Boundless line. Small enough to comfortably fit in the palm of your hand, the Tera delivers truly powerful smooth clouds from the first draw. Featuring two removable 18650 batteries, the unit can also be charged via USB. The Tera is perfect for on the go use and can also be attached to a glass water pipe using the Boundless water pipe adapter. This portable aromatherapy device uses convection heated air and radiative heat transfer to efficiently vaporize your materials. This means that there is a complete separation between the heating element and the herb chamber.

4



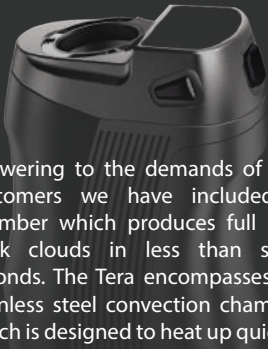

Answering to the demands of our customers we have included a chamber which produces full and thick clouds in less than sixty seconds. The Tera encompasses an stainless steel convection chamber which is designed to heat up quickly to the desired temperature while evenly vaporizing terpenes and cannabinoids. The unit comes equipped with full temperature control ranging from 104°F-428°F (40°C-220°C). Also, featuring a fully rotatable mouthpiece with an improved airflow, there is also the option to interchange with a sleek glass mouthpiece for an improved taste.

Key Features

Dimensions

- Height: 107mm
- Width: 44.5mm
- Depth: 59mm
- Weight: 0.7 lbs

Temperature levels

104-428 F // 40-220 C

Screen: Digital OLED screen

Battery Capacity:

2x18650 (removable)

Unit can be charged via USB

Airflow

Redesigned mouthpiece produce bigger clouds with less irritation

Chamber: Stainless Steel
Convection

Heating System

Convection heating system with an isolated heating path

Heating Element

Ceramic heating rod located below completely separated from herb chamber.




Haptic Feedback operation

Compact and rugged design with textured grooves for comfortable hand placement

Built with medical and food grade material


Non combustion aromatherapy device

What's in a Tera aromatherapy device?

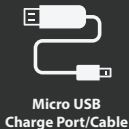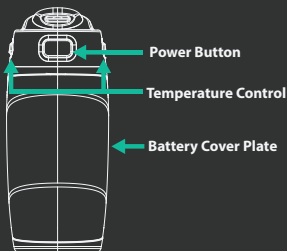


How it works:

Powered by two 18650 removable batteries the ceramic heating rod element generates heat working as radiative heat which moves towards the separate stainless steel convection chamber. Once the stainless steel chamber is heated it quickly and efficiently vaporizes the material and extracts terpenes and cannabinoids. The Tera has an isolated airpath away from any interfering internal wiring which ensures a pure and clean tasting vaping experience each time.

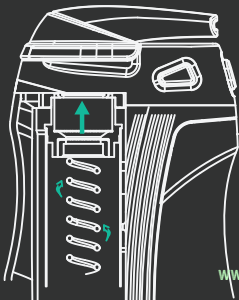


How to power the Tera on

To power the Tera 'ON' click the rectangular button five times in rapid succession. Please note unit will not power up if the clicks are too slow. Once in the 'ON' mode the screen will illuminate and it will automatically heat up to the last previously used temperature. The unit will stay on for a period of five minutes.*The unit will not heat up until directed. To heat the chamber hold down the power 'ON' button for three seconds; it will automatically heat to the last previously used temperature. Once the five minute timer ends, the unit will vibrate and enter sleep mode until turned back on. To restart the heating process hold the button button on for 3 seconds.

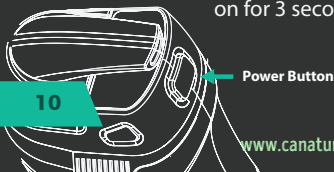

Adjusting the Temperature

The temperature controls are easy to use on the Tera. *Please note, the unit will not heat up until directed. To heat the chamber hold down the power 'ON' button for three seconds; it will automatically heat to the last previously used temperature. The buttons are located on both sides of the unit. With the power 'ON' button facing the user the button to increase the temperature is located to the left. Each click will raise the temperature by one degree. To decrease the temperature use the button located to the right of the power button.

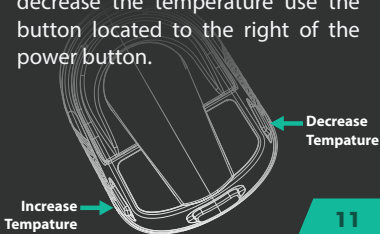

As before each single click will change the temperature, it will decrease the temperature by one degree. Temperature ranges from 104°F-428°F and 40°C-220°C. To switch between Fahrenheit and Celsius click the two side buttons at the same time once.

Mouthpiece Components

- Tip
- Silicon bowl
- Stainless steel mouthpiece screen
- Mouthpiece base with embedded magnets
- Clear mouthpiece tip o-ring



How to Remove the Mouthpiece

The Tera has two small magnets which help the mouthpiece adhere to the rest of the unit. To remove simply pull the mouthpiece upwards to pull away from the magnets. Once removed the chamber should be visible.


To put the mouthpiece back into place line up the piece to the body so it should click into place. The magnets will help it stay in position. Rotate the mouth tip towards user to begin use.

How To Load Herb

1. To load herb make sure the unit is turned off.
2. The material should be properly broken up. A grinder is recommended to use.
3. Remove the mouthpiece from the Tera. The bowl will be visible and will be ready to pack.
4. Insert however much material is desired to be vaped. The bowl can hold up to 0.6 of a gram. Do not overfill the bowl.
5. Once the herb is loaded you are ready to attach the mouthpiece.

How to Load Concentrate


1. Use the loading mesh concentrate pad that comes included to place concentrate on top.
2. We recommend using enough concentrate for single doses.
3. Drop the mesh pad with the concentrate on top.
4. Once your concentrate is loaded click the power 'ON' button three times consecutively to switch to concentrate mode. There is only one temperature in concentrate mode which is automatically set to 500°F or 260°C. To heat the chamber hold down the power 'ON' button for 3 seconds.

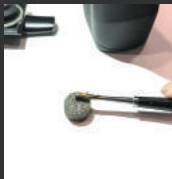

How to use the Water Pipe Adapter

The WPA (water pipe adapter) is intended to be used for units from the Boundless Technology line. The Tera has a specific WPA that can only be used for the Tera unit. The adapter is to be used with a glass water pipe as it helps filter the vaporized product. It is designed to fit male and female stems ranging from 10mm-18mm. Using the water pipe adapter not only helps alleviate any irritation caused by the vapor but it also enhances the overall taste of your vaporized product.



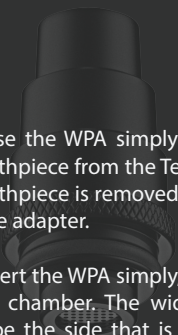

1. To use the WPA simply remove the mouthpiece from the Tera. Once the mouthpiece is removed you can insert the adapter.

2. To insert the WPA simply, insert it into the chamber. The wider base should be the side that is inserted into the Tera. Be sure the WPA is evenly leveled onto the unit.

3. When removing the WPA after use please use extreme caution as the stainless steel does get hot.

4. The WPA can be disassembled into three separate pieces for an easier clean. To disassemble twist the small circular notch off to the left.

How to clean the Tera

Cleaning the unit right after use is key to keeping your Tera clean and working properly. The rotating mouthpiece can be disassembled making it easier to maintain.

To clean the mouthpiece you may use isopropyl alcohol, we recommend 91%. If leaving the mouth-piece in isopropyl to soak do not submerge for longer than ten minutes. The screen can be removed and individually clean for an easier experience. Please be advised only the mouthpiece may be submerged in isopropyl alcohol and NOT the body of the unit.

If isopropyl is applied to the body it WILL cause cosmetic damage and this will not be covered by the warranty. The inside chamber can be cleaned with a cleaning brush. If needed the bottom chamber screen can be removed and cleaned off as well. Please use caution when cleaning the device.

Tips


1. Cleaning the unit while still relatively warm makes it easier to remove residue.
2. You may also use coarse salt paired with isopropyl alcohol to help remove residue from the mouthpiece.
3. Cleaning daily right after use is the best method to keeping your unit clean.

Battery and Charging

The Tera is equipped with two removable 18650 batteries which are located right underneath the power 'ON' button.

To remove the batteries gently tug the cover plate away from the body of the device. Once removed the batteries will be visible and can be replaced when necessary.

(*Please noted to use High Drain Battery for better vaping experience)

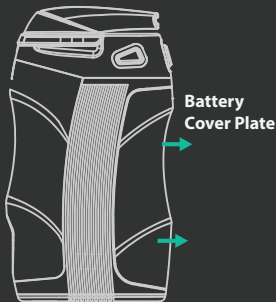

The unit can also be charged via USB or directly to the wall through a 18650 battery charger. Charging time for the Tera on average is about three hours(*Connected with 2A Current Output Charger). On a full charge the Tera should last for about ten continuous sessions at the highest temperature setting. The screen should illuminate with a battery symbol once plugged into the charger.

It is not advised to use the Tera while charging.

Also, to prevent from overheating do not leave the unit charging overnight.

Do not leave the unit unattended while charging.

Do not leave device charging on bare carpet or rug.

Do not overcharge.

The device contains a lithium ion battery. Please follow the proper procedures for disposing batteries such as using a recycling facility or hazardous waste collection site.

Do not discard in trash.

Notice: Lithium ion batteries are subject to degradation and reduced run time over the course of regular use. While Boundless Technology took great care in selecting premium quality long life lithium ion batteries due to their non-memory features and ability to cycle 300 times preceding degradation battery life will gradually diminish with extended use.

Warranty

3 YEAR LIMITED WARRANTY

Boundless technology, LLC warrants this Tera branded device against defects in materials and workmanship under normal use for a period of three (3) years from the date of retail purchase by the original end-user. The original bill of sale is required to redeem warranty. The limited warranty covers three (3) years for electronics, ceramic heating chamber, structural integrity and attachments. The lithium-ion battery is covered for ninety (90) days. If a physical defect arises and a claim is made within the warranty period, at its option and to extent permitted by law, Boundless Technology will either:

- Repair the product defect

- Exchange the product with another product that is new or functionally equivalent to device.
- Refund the purchase price of the device if returned within 30 days of the purchase date and if bought from our online retail site: **bndlstech.com**.

EXCLUSIONS AND LIMITATIONS

The Limited Warranty applies only to products manufactured by Boundless Technology, LLC, which can be identified by the “Boundless Technology, LLC” trademark, tradename or logo affixed to the device. The Limited Warranty does not apply to any non-Boundless, LLC products. This warranty does not apply to (i) damage caused by accident, abuse, misuse, flood, fire, earthquake, acts of piracy or other external causes;

(ii) a device or part that has been modified to alter the functionality or capability without the written permission of Boundless technology; (iii) cosmetic damage, including but not limited to dents, scratches and/or broken plastic.

This warranty applies to the original end-user and is non-transferrable. Boundless Technology, LLC warranties only apply to devices that are purchased from authorized retailers serviced by an authorized Boundless Technology, LLC distributor.

For questions regarding authorized retailers please visit our online retail site which has our distributors listed: bndlstech.com. To claim a warranty contact info@bndlstech.com or call 1-866-355-7061.

You may also submit a ticket to our help desk ticket system. Once you get in touch with us we will request the proper documentation and a photo or video in order to confirm the issue. We may also ask for the unit back for further investigation.

SAFETY DISCLAIMERS

Warning

Failure to follow these safety instructions could result in personal injury or damage. Users of this device do so at their own risk. Neither Boundless Technology, LLC nor its retailers assume any responsibility or liability associated with the use/misuse of the device. Boundless Technology branded products are intended for adult use and consumption only. Keep this booklet in a safe place for future reference.

Disclaimer

- This device is designed as a mobile solution for the practitioners of aromatherapy and should be used for dry herbal blends as indicated. This device is not intended for use with illegal substances.

Choking Hazard

- The Tera contains small parts which may be a choking hazard to small children. Keep device away from children.

Handling the Tera

- Do not drop, deform, bend, crush, puncture, incinerate, microwave, shred, paint, or insert foreign objects into a Boundless Tera.

- Do not clean the Tera other than instructed by Boundless Technology, LLC

- Do not attempt to repair or modify the Tera yourself

- Do not use a damaged Tera charger or non Boundless Technology charger. Incompatible chargers may carry different voltage which may be a fire hazard. Only use the charger provided. Failure to do will void the limited warranty offered on Boundless Technology products.

- Use caution when handling the Tera, the heating chamber is hot. Refrain from direct contact with the main heating chamber when hot. Do not leave the device unattended when it is powered on or while the device is still hot.

- Do not leave in extreme temperatures.

SAFETY FEATURES

Sleep Protection

The device is equipped with a safety sleep mode. When the device is powered on and after five minutes of use it will vibrate and go into sleep mode to avoid over-use. Press and hold the power button for three seconds to exit sleep mode.

Memory Function

The device features a smart memory function. It will memorize current temperature before powering off. When powered on for the next use the last previously used temperature will be displayed.

GET IN TOUCH WITH US

E-Mail

info@bndlstech.com

Online Retail Site

BNDLSTECH.com

Follow Us @BNDLSTECH





BNDLSTECH.COM

www.canatura.com/en



EST. 2016

CANATURA

HEMP  LIFE

Canatura - Online store with the best
hemp products for your health

www.canatura.com/en

Copyright reserved